
PosiTector[®] 200 Series

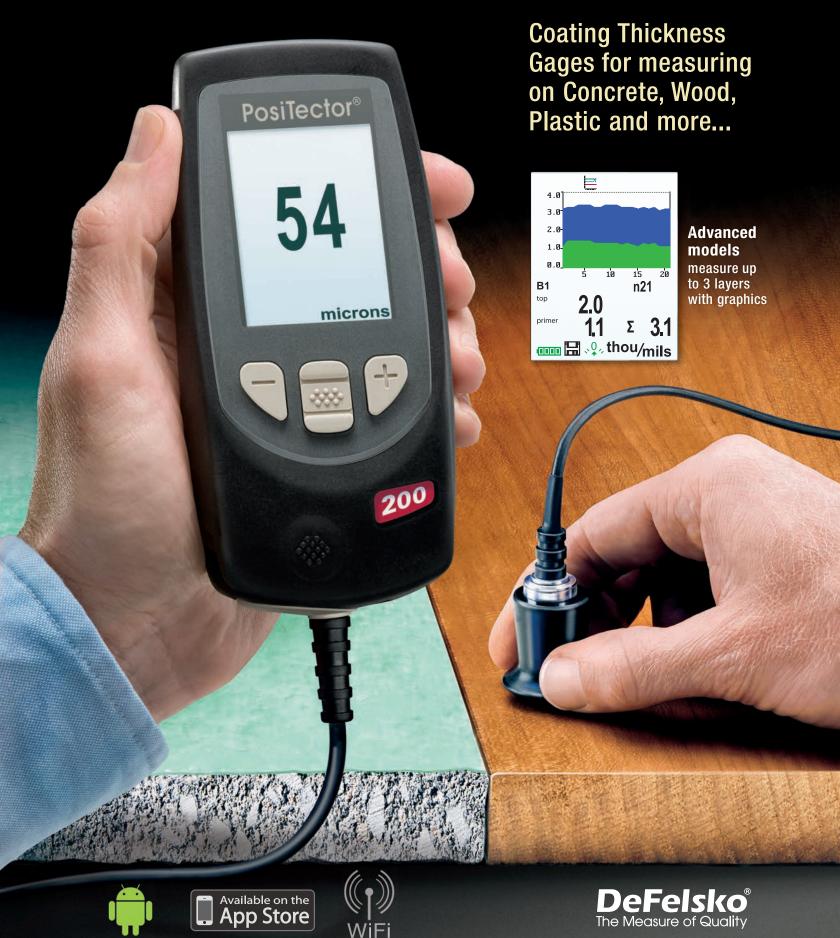

PosiTector[®] 200 Series

All Gages Feature...

Simple

- Ready to measure—no adjustment required for most applications
- RESET feature instantly restores factory settings

Durable

- Solvent, acid, oil, water and dust resistant-weatherproof
- Shock-absorbing, protective rubber holster with belt clip
- Two year warranty on gage body AND probe

Accurate

- Responsive transducers provide fast, accurate readings
- Certificate of Calibration showing traceability to NIST or PTB included
- Proven non-destructive technique conforms to ASTM D6132 and ISO 2808

Versatile

- PosiTector body accepts all PosiTector probes easily converting from a coating thickness gage to a surface profile gage, dew point meter, Shore hardness durometer, soluble salt tester or wall thickness gage
- High contrast reversible color LCD with backlit display
- Flip Display enables right-side-up viewing
- Uses alkaline or rechargeable batteries (built-in charger)

Powerful

- Continually displays average, standard deviation, min/max thickness and number of readings while measuring
- USB port for connection to a Mac/PC and to supply continuous power
- Every stored measurement is date and time stamped
- PosiSoft USB Drive—stored readings, graphs and screen captures can be accessed using universal PC/Mac web browsers or file explorers. No software required.
- Includes PosiSoft suite of software for viewing and reporting data



Select from a variety of measurement ranges			
Probes	200B	200C	200D
Typical Applications	Polymer coatings on wood, plastic, etc.	Coatings on concrete, fiberglass, etc.	Thick, soft coatings such as polyurea, asphalitic neoprene, very thick polymers, etc.
Measurement Range*	13 – 1000 μm 0.5 – 40 mils	50 – 3800 μm 2 – 150 mils	50 – 7600 μm 2 – 300 mils
Accuracy	+/- (2 μm + 3% of reading) +/- (0.1 mil + 3% of reading)		+/- (20 μm + 3% of reading) +/- (1 mil + 3% of reading)
Minimum Layer Thickness^	13 µm 0.5 mil	50 µm 2 mils	500 µm 20 mils

* Range limits apply to polymer coatings. D probe- polyurea range is 50-5000 μm (2-200 mils). ^For multiple-layer applications only. Dependent on material being tested.

Select Standard or Advanced Features

Standard Models

Includes ALL features as shown on left plus...

- Measure the total thickness of a coating system
- Storage of 250 readings—stored readings can be viewed or downloaded


Advanced Models

Includes ALL features as shown on left plus...

- Measure the total thickness of a coating system or up to 3 individual layer thicknesses in a multi-layer system. Also features graphic readout for detailed analysis of the coating system.
- Storage of 100,000 readings in up to 1,000 batches
- Graphics mode with screen capture
- Live graphing of measurement data
- Batch annotation—add notes and change batch names with onscreen QWERTY keyboard
- WiFi technology wirelessly communicates with PosiSoft.net and downloads software updates
- Data transfer via USB to a PC or via Bluetooth Wireless Technology to a mobile device, PC or printer

For a complete comparison of the Standard and Advanced features visit www.defelsko.com/p200



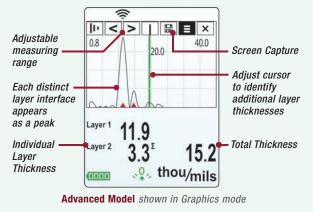



Size: 135 x 61 x 28 mm (5.25" x 2.4" x 1.1") **Weight:** 140 g (4.9 oz.) without batteries Conforms to ASTM D6132 and ISO 2808



DeFelsko Corporation - 800 Proctor Ave. • Ogdensburg, New York 13669-2205 USA **Toll Free 1-800-448-3835 •** Tel: +1-315-393-4450 • Fax: +1-315-393-8471 techsale@defelsko.com • www.defelsko.com



©DeFelsko Corporation USA 2016. All Rights Reserved. Technical Data subject to change without notice. • Printed in USA • P200.v.LW/W1608

PosiSoft[®] Suite of Software

Four FREE and unique ways to view and report your PosiTector and PosiTest data

PosiSoft Desktop — PC/Mac

Powerful desktop software for downloading, viewing, printing and storing measurement data. No internet connection required.

- Import readings directly from the gage via USB or from legacy PosiSoft desktop versions
- Synchronize measurement data including readings, notes and pictures to and from PosiSoft.net
- Import/Export Templates and Jobs to share with other users
- NEW Import PDF forms and overlay Custom Fields for automatic population of inspection and measurement data
- Report preview automatically refreshes as changes are made

PosiSoft.net — Web-based

A web-based application offering secure centralized management of readings. Access your data from any web-connected device.

- Synchronize data when connected via USB or WiFi
- Synchronize measurement data including readings, notes and pictures with PosiSoft Desktop and PosiTector App
- Securely store measurement data in the cloud and share with authorized users via a secure login



PosiTector App — Mobile


Mobile app connects PosiTector Advanced instruments, the PosiTector SmartLink and the PosiTest AT-A to your *iOS* or *Android* smart device.

- Auto pairing Bluetooth BLE connection
- Automatically generate user-formatted reports and share via email, text, cloud storage services like Dropbox, and more
- Export readings to PosiSoft Desktop or synchronize readings to and from PosiSoft.net for further reporting and archival options



PosiSoft Custom PDF Report Generator

Easily create reports from your measurement data in seconds.

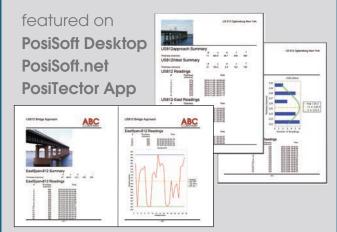


- Include inspection information such as on-site pictures, screen captures, notes and more to communicate important details
- Create and save multiple custom layouts as templates insert cover pages, add logos/images, and select font and point size
- Select the information to include for each product type charts, histograms, readings, time stamps and more
- Compile multi-batch reports from one or more probes and instrument types
- Export readings as comma separated value (.CSV) files which can easily be imported into Excel and other supporting applications



Jobs feature consolidates batches into groups to keep measurement data organized and to quickly create multi-batch reports (not available on PosiTector App)

PosiSoft USB Drive — Gage Based

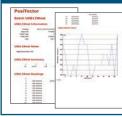

A simple gage interface to retrieve data in a manner similar to USB flash drives, cameras, or digital audio players. No software to install or internet connection required.

- View and print readings and graphs using universal PC/Mac web browsers and file explorers
- Measurement data can be printed quickly from a formatted HTML report or exported in .CSV format for further analysis in spreadsheets
- Simple file management Copy and paste measurement data from the PosiTector to a local folder on your computer, network folder or cloud drive
- Access stored screen captures (snapshots) of the PosiTector display



DeFelsko Corporation 800 Proctor Ave., Ogdensburg, New York 13669-2205 USA **Toll Free: 1-800-448-3835** • Tel: +1-315-393-4450 • Fax: +1-315-393-8471 techsale@defelsko.com • www.defelsko.com

